

2-Finger Parallel-Gripper RH 801 / 806

Assembly and Operating manual



Imprint

Copyright:

This manual remains the copyrighted property of SCHUNK GmbH & Co. KG. It is solely supplied to our customers and operators of our products and forms part of the product. This documentation may not be duplicated or made accessible to third parties, in particular competitive companies, without our prior permission.

Technical changes:

We reserve the right to make alterations for the purpose of technical improvement.

Document number: 0389674

Edition: 01.00 | 13/08/2014 | en

© SCHUNK GmbH & Co. KG

All rights reserved.

Dear customer,

congratulations on choosing a SCHUNK product. By choosing SCHUNK, you have opted for the highest precision, top quality and best service.

You are going to increase the process reliability of your production and achieve best machining results – to the customer's complete satisfaction.

SCHUNK products are inspiring.

Our detailed assembly and operation manual will support you.

Do you have further questions? You may contact us at any time – even after purchase.

Kindest Regards

Yours SCHUNK GmbH & Co. KG

Spann- und Greiftechnik

Bahnhofstr. 106 – 134

D-74348 Lauffen/Neckar

Tel. +49-7133-103-0

Fax +49-7133-103-2399

info@de.schunk.com

www.schunk.com



Reg. No. 003496 QM08



Reg. No. 003496 QM08

Table of contents

| | | |
|----------|---|-----------|
| 1 | About this manual | 4 |
| 1.1 | Warnings..... | 4 |
| 1.2 | Applicable documents | 4 |
| 2 | Basic safety notes | 5 |
| 2.1 | Intended use..... | 5 |
| 2.2 | Not intended use | 5 |
| 2.3 | Environmental and operating conditions..... | 5 |
| 2.4 | Product safety..... | 6 |
| 2.4.1 | Protective equipment | 6 |
| 2.4.2 | Demands on the top jaws | 6 |
| 2.4.3 | Constructional changes, attachments, or modifications..... | 6 |
| 2.5 | Personnel qualification..... | 6 |
| 2.6 | Using personal protective equipment..... | 7 |
| 2.7 | Notes on particular risks..... | 7 |
| 3 | Warranty | 8 |
| 4 | Scope of delivery | 8 |
| 5 | Accessories | 8 |
| 5.1 | Sensors..... | 8 |
| 6 | Technical data | 9 |
| 7 | Assembly | 10 |
| 7.1 | Mechanical connection | 10 |
| 7.2 | Air connection | 11 |
| 7.3 | Sensors..... | 12 |
| 7.3.1 | Proximity switch..... | 12 |
| 8 | Maintenance | 14 |
| 9 | Translation of original declaration of incorporation | 15 |







1 About this manual

This instruction is an integral part of the product and contains important information for a safe and proper assembly, commissioning, operation, maintenance and help for easier trouble shooting.

Before using the product, read and note the instructions, especially the chapter "Basic safety notes".

1.1 Warnings

To make risks clear, the following signal words and symbols are used for safety notes.

| | |
|---|---|
|  | <p> DANGER</p> <p>Danger for persons. Non-compliance will inevitably cause irreversible injury or death.</p> |
|  | <p> WARNING</p> <p>Dangers for persons. Ignoring a safety note like this can lead to irreversible injury and even death.</p> |
|  | <p> CAUTION</p> <p>Dangers for persons. Non-observance can cause minor injuries.</p> |
|  | <p>NOTICE</p> <p>Material damage Information about avoiding material damage.</p> |

1.2 Applicable documents

- General terms of business
- Catalog data sheet of the purchased product
- Assembly and Operating manuals of the accessories

The documents listed here, can be downloaded on our homepage www.schunk.com

2 Basic safety notes

2.1 Intended use

The product was designed to grip and to temporarily and securely hold workpieces and objects.

The product is intended for installation in a machine/system. The requirements of the applicable guidelines must be observed and complied with.

The product may be used only in the context of its defined application parameters ([👉 6, Page 9](#)).

The product is designed for industrial use.

To use this unit as intended, it is also essential to observe the technical data and installation and operation notes in this manual and to comply with the maintenance intervals.

2.2 Not intended use

Use which is not specified as an intended use is for instance when the product is for example used as a pressing tool, stamping tool, lifting tool, guide for tools, cutting tool, tensioning mean, boring tool.

2.3 Environmental and operating conditions

- Make sure that the product and the top jaws are a sufficient size for the application.
- Make sure that the environment is free from splash water and vapors as well as from abrasion or processing dust. Exceptions are products that are designed especially for contaminated environments.

2.4 Product safety

Dangers arise from the product, if:

- the product is not used in accordance with its intended purpose.
- the product is not installed or maintained properly.
- the safety and installation notes are not observed.

Avoid any manner of working that may interfere with the function and operational safety of the product.

Wear protective equipment.

NOTE

More information are contained in the relevant chapters.

2.4.1 Protective equipment

Provide protective equipment per EC Machinery Directive.

2.4.2 Demands on the top jaws

Arrange the top jaws such that when the product is depressurized it can reach one of the end positions either open or closed and therefore no residual energy can be released when changing the top jaws.

2.4.3 Constructional changes, attachments, or modifications

Additional drill holes, threads, or attachments that are not offered as accessories by SCHUNK may be attached only with permission of SCHUNK.

2.5 Personnel qualification

The assembly, initial commissioning, maintenance, and repair of the product may be performed only by trained specialist personnel. Every person called upon by the operator to work on the product must have read and understood the complete assembly and operating manual, especially the chapter "Basic safety notes" ([👉 2, Page 5](#)). This applies particularly to personnel only used occasionally, such as maintenance personnel.

2.6 Using personal protective equipment




When using this product, observe the relevant industrial safety regulations and use the personal protective equipment (PPE) required!

- Use protective gloves, safety shoes and safety goggles.
- Observe safe distances.
- Minimal safety requirements for the use of equipment.

2.7 Notes on particular risks

Generally valid:

- Remove the energy supplies before installation, modification, maintenance, or adjustment work.
- Make sure that no residual energy remains in the system.
- Do not move parts by hand when the energy supply is connected.
- Do not reach into the open mechanism or the movement area of the unit.
- Perform maintenance, modifications, and additions outside the danger zone.
- Secure the product during all operations against uncontrolled activation.
- Take a precautionary approach by maintenance and disassembly.
- Only specially trained staff should disassemble the product.

| | |
|---|--|
|  | <p>! WARNING</p> <p>Risk of injury due to squeezing and bumping during movement of the gripper jaws and breaking or loosening of the gripper fingers!</p> |
|  | <p>! WARNING</p> <p>Risk of injury from objects falling and being ejected</p> <ul style="list-style-type: none"> • The danger zone must be surrounded by a safety fence during operation. |
|  | <p>! WARNING</p> <p>While disassembling uncontrollable moves of parts of the gripper possible!</p> |

3 Warranty

If the product is used as intended, the warranty is valid for 24 months from the date of delivery from the production facility under the following conditions:

- Observe the applicable documents ([👉 1.2, Page 4](#))
- Observance of the ambient conditions and operating conditions ([👉 2.3, Page 5](#))

Parts touching the workpiece and wearing parts are not part of the warranty.

4 Scope of delivery

The scope of delivery includes:

- 2-Finger Parallel-Gripper RH 801, 806 in the ordered model.
- Accessory pack

5 Accessories

A wide range of accessories are available for this module.

For information about which accessories can be used with the appropriate product version [👉 catalog](#).

5.1 Sensors

Overview of the compatible sensors

| Designation | Type |
|------------------------------|------|
| Inductive proximity switches | PS |

- Exact type designation of the compatible sensors see [👉 catalog](#).
- If you require further information on sensor operation, contact your SCHUNK contact person or download information from our homepage.



6 Technical data

| | |
|--------------------------------|--|
| Pressure medium | Compressed air, compressed air quality according to ISO 8573-1:7 4 4 |
| Min. pressure [bar] | 2 |
| Max. pressure [bar] | 7 |
| Nominal working pressure [bar] | 6 |
| Min. ambient temperature [°C] | 5 |
| max. ambient temperature [°C] | 60 |
| IP rating | 30 |
| Noise emission [dB(A)] | ≤ 70 |

Further technical data can be found in the catalog data sheet.
The most recent version applies.

7 Assembly

7.1 Mechanical connection

| | |
|---|---|
|  |  WARNING |
| | <p>Risk of injury during assembly!</p> <ul style="list-style-type: none"> • Switch off the energy supply. |

Check the evenness of the bolting surface

The values relate to the entire bolting surface.

Requirements for levelness of the bolting surface (Dimensions in mm)

| Diameter | Permissible unevenness |
|----------|------------------------|
| < 100 | < 0.02 |
| > 100 | < 0.05 |

Gripper assembly

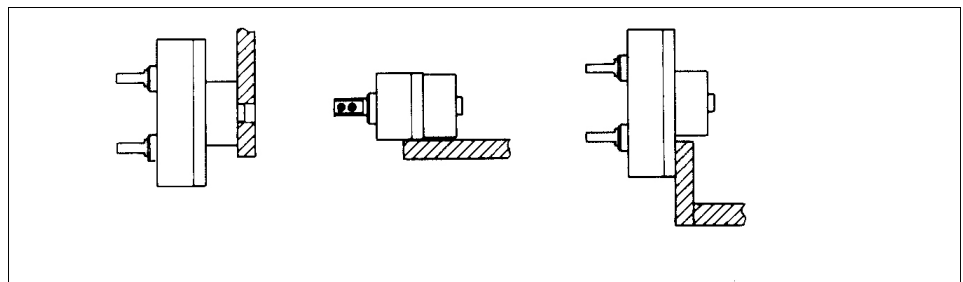


Fig. 1 Fastening examples

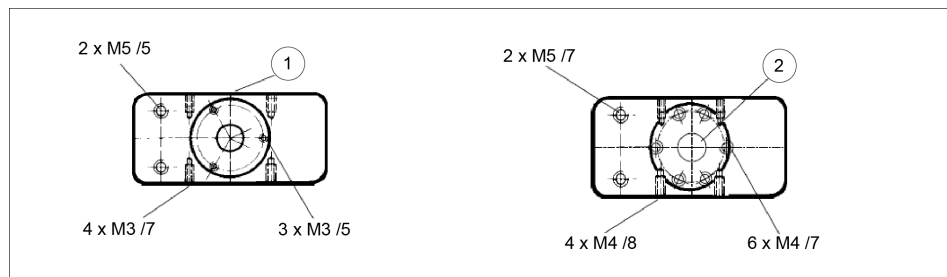



Fig. 2 RH 801 and RH 806


| | |
|---|--|
| 1 | 1 Centering collar $\varnothing 9$ h9 / 3 high |
| 2 | 1 Centering hole $\varnothing 14$ h9 / 5 high |


NOTE

- Fasten the module using the provided mounting holes.
- Fasten the top jaws using the provided mounting holes.

7.2 Air connection

| | |
|---|---|
|  | <p>⚠ WARNING</p> |
| | <p>Risk of injury during assembly!</p> <ul style="list-style-type: none"> • Switch off the energy supply. |

| | |
|---|--|
|  | <p>NOTICE</p> |
| | <p>Damage to the gripper is possible!</p> <p>If the maximum permissible finger weight or the permissible mass moment of inertia of the fingers is exceeded, the gripper can be damaged.</p> <ul style="list-style-type: none"> • A jaw movement always has to be without jerks and bounce. • You must therefore implement sufficient reduction and/or damping. • Observe the diagrams and information in the catalog data sheet. |

| | |
|--|---|
|  | <p>NOTICE</p> |
| | <p>Observe the requirements for the air supply (👉 6, Page 9).</p> |

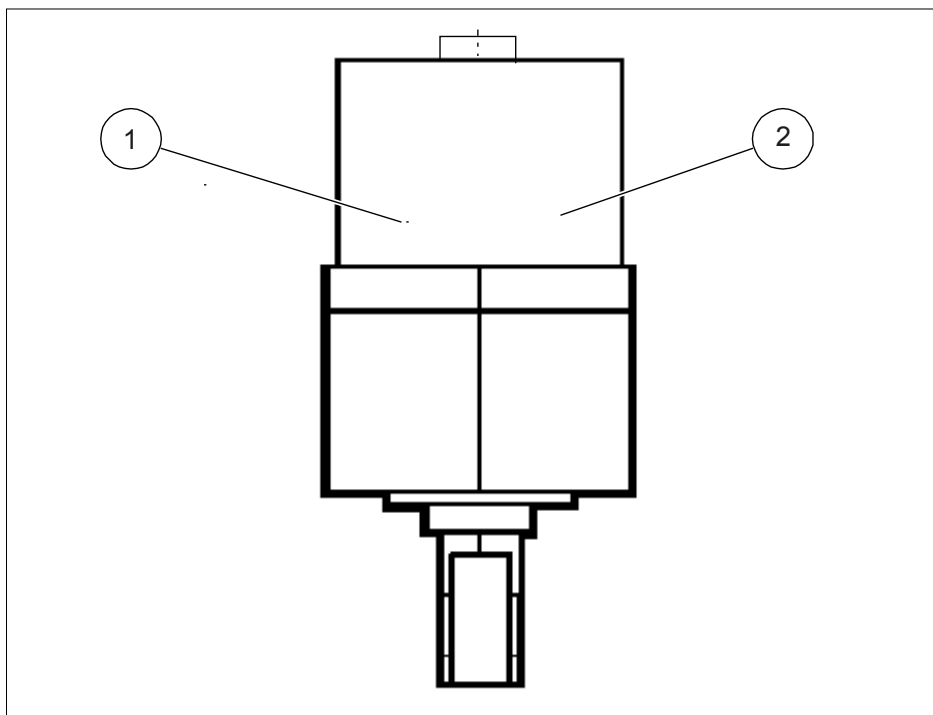


Fig. 3 Air connections

| | |
|---|---------------------------------|
| 1 | Connection "Open" (M5 / 4 deep) |
| 2 | Connection "Open" (M5 / 4 deep) |

7.3 Sensors

7.3.1 Proximity switch

Depending on the variant the grippers are supplied with or without proximity switches.

Make sure that you handle the proximity switches properly:

- Do not pull on the cable.
- Do not allow the sensor to dangle from the cable.
- Do not overtighten the mounting screw or mounting clip.
- Please adhere to a permitted bend radius of the cable. (👉 catalog).
- Avoid contact of the proximity switches with hard objects and with chemicals, in particular nitric acid, chromic acid and sulphuric acid.

The inductive proximity switches are electronic components, which can react sensitively to high-frequency interference or electromagnetic fields.

- Check to make sure that the cable is fastened and installed correctly. Provide for sufficient clearance to sources of high-frequency interference and their supply cables.

Gripper with proximity switch

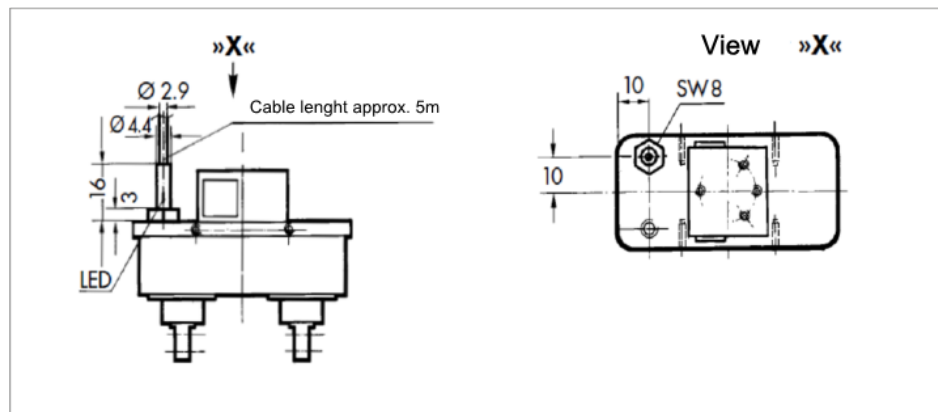


Fig. 4 Gripper with proximity switch

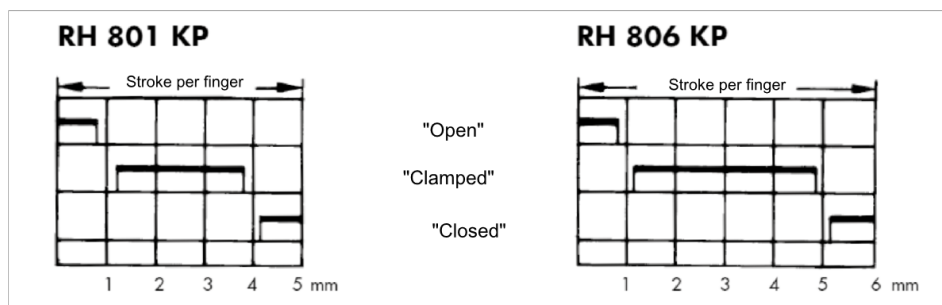


Fig. 5

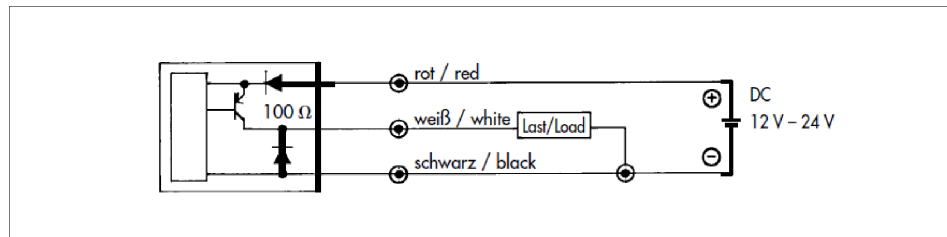


Fig. 6 Circuit diagram

8 Maintenance

The gripper is maintenance-free.

Clean the gripper carefully with a soft cloth when dirty.

Do not use solvents.

Do not disassemble the gripper Do not disassemble the gripper. All screws are fixed with a high-strength adhesive.

The proximity switches can be exchanged.

9 Translation of original declaration of incorporation

in terms of the Directive 2006/42/EG, Annex II, Part 1.B of the European Parliament and of the Council on machinery.

Manufacturer/ SCHUNK GmbH & Co. KG Spann- und Greiftechnik
Distributor Bahnhofstr. 106 – 134
D-74348 Lauffen/Neckar

We hereby declare that on the date of the declaration the following incomplete machine complied with all basic safety and health regulations found in the directive 2006/42/EC of the European Parliament and of the Council on machinery. The declaration is rendered invalid if modifications are made to the product.

Product designation: 2-Finger Parallel-Gripper / RH 801, 806 801 / 806 /
ID number 0360174... 0360181

The incomplete machine may not be put into operation until conformity of the machine into which the incomplete machine is to be installed with the provisions of the Machinery Directive (2006/42/EC) is confirmed.

Applied harmonized standards, especially:

EN ISO Safety of machinery - General principles for design - Risk assessment
12100:2011-03 and risk reduction

The manufacturer agrees to forward on demand the relevant technical documentation for the partly completed machinery to state offices.

The special technical documents according to Appendix VII, Part B belonging to the incomplete machine have been compiled.

Person authorized to compile the technical documentation:
Robert Leuthner, Address: see manufacturer's address

Lauffen/Neckar, January 2015

Signature – see original declaration
p.p. Ralf Winkler,
Head of Gripping Systems Development

