



Assembly and operating manual

TRIBOS-Mini

Polygonal toolholder

Translation of Original Operating
Manual

Imprint

Copyright:

This manual is protected by copyright. The author is SCHUNK SE & Co. KG.
All rights reserved.

Technical changes:

We reserve the right to make alterations for the purpose of technical improvement.

Document number: 1561525

Version: 02.00 | 27/01/2025 | en

Dear Customer,

Thank you for trusting our products and our family-owned company, the leading technology supplier of robots and production machines.

Our team is always available to answer any questions on this product and other solutions. Ask us questions and challenge us. We will find a solution!

Best regards,

Your SCHUNK team

Customer Management

Tel. +49-7133-103-2500

Fax +49-7133-103-2239

cms@de.schunk.com



Please read the operating manual in full and keep it close to the product.

Table of Contents

1	General	5
1.1	About this manual.....	5
1.1.1	Presentation of Warning Labels	5
1.1.2	Definition of Terms	6
1.1.3	Symbol definition.....	6
1.1.4	Applicable documents	6
1.2	Warranty	6
1.3	Scope of delivery.....	6
1.4	Accessories	7
2	Basic safety notes.....	8
2.1	Appropriate use	8
2.2	Inappropriate use	8
2.3	Notes on safe operation.....	9
2.4	Personnel qualifications	10
2.5	Personal protective equipment	11
2.6	Handling during transport	11
2.7	Structural changes.....	12
2.8	Behavior in case of malfunctions.....	12
2.9	Hazardous points on the product.....	13
3	Technical data	14
3.1	General data.....	14
3.2	Ambient conditions and operating conditions	19
3.3	Maximum RPM.....	19
3.4	Minimum clamping depth and max. clamping depth	20
3.5	Usable tool shank types	21
3.5.1	Product with HSK, SK, JIS-BT, Capto or ER mount, ER mount not coolant-proof.....	21
3.5.2	Product with ER mount coolant-proof or HJND mount	22
3.6	Further information on the product	23
4	Design and description	24
4.1	Design	24
4.2	Functional description.....	24

5	Operation	25
5.1	Basic information.....	25
5.2	Clamping the tool.....	27
5.2.1	Product with HSK, SK, JIS-BT, Capto or ER mount, ER mount not coolant-proof.....	27
5.2.2	Product with coolant-proof ER mount	28
5.2.3	Product with HJND mount	28
5.3	Unclamping the tool	29
5.4	Tool changes	29
5.5	Coolant supply.....	30
6	Assembly	31
6.1	Basic information.....	31
6.2	Assembly of the product	32
6.2.1	Product with HSK, SK, JIS-BT, or Capto mount	33
6.2.2	Product with ER mount.....	34
6.2.3	Product with HJND mount	36
7	Maintenance	37
7.1	Basic information.....	37
7.2	Intervals and tasks	38
7.2.1	Cleaning the clamping surface	38
7.2.2	Cleaning the product	38
8	Troubleshooting	39
9	Disassembly	40
9.1	Basic information.....	40
9.2	Disassembly of the product	41
10	Storage	42
11	Disposal	43

1 General

1.1 About this manual

This manual contains important information for a safe and appropriate use of the product.

This manual is an integral part of the product and must be kept accessible for the personnel at all times.

Before starting work, the personnel must have read and understood this operating manual. Prerequisite for safe working is the observance of all safety instructions in this manual.

In addition to these instructions, the documents listed under ▶ 1.1.4 [6] are applicable.

NOTE: The illustrations in this manual are intended to provide a basic understanding and may deviate from the actual version.

1.1.1 Presentation of Warning Labels

To make risks clear, the following signal words and symbols are used for safety notes.



⚠ DANGER

Dangers for persons!

Non-observance will inevitably cause irreversible injury or death.



⚠ WARNING

Dangers for persons!

Non-observance can lead to irreversible injury and even death.



⚠ CAUTION

Dangers for persons!

Non-observance can cause minor injuries.

CAUTION

Material damage!

Information about avoiding material damage.

1.1.2 Definition of Terms

The term "product" replaces the product name on the title page in this manual.

1.1.3 Symbol definition

The following symbols are used in this manual:

■ Prerequisite for an action

1. Action 1

2. Action 2

⇒ Intermediate results

⇒ Final results

▶ 1.1.3 [📄 6]: chapter number and [page number] in hyperlinks

1.1.4 Applicable documents

- General terms of business *
- Catalog data sheet of the purchased product *

The documents labeled with an asterisk (*) can be downloaded from **schunk.com**.

1.2 Warranty

The warranty is valid for 24 months from the date of delivery from the production facility if the product is used as intended and in compliance with the prescribed operating data.

Wear parts and parts that come in contact with the tool or machine are not covered by the warranty.

1.3 Scope of delivery

- Product
- Tool clamping technology safety information (ID 1561465)

1.4 Accessories

The following accessories for the product are available separately:

- GZB-S intermediate sleeves for clamping several different shank diameters
- GZB-S sleeve remover for removing intermediate sleeves
- Clamping device SVP-2
- Clamping device SVP-2D
- Clamping device SVP-Mini
- Reduction inserts SRE
- Cover for clamping device SVP-2/SVP-2D
- Storage rack
- Cover for storage rack
- Length adjustment LMG-M
- Cleaning brush for cleaning clamping diameters

additionally for products with ER mount:

- Depth stop
- Actuation key cap nut

additionally for products with HJND mount:

- Torque wrench
- Adapter
- Open-end socket wrench

2 Basic safety notes

2.1 Appropriate use

- The product is used to clamp rotationally symmetric tools.
- The product is intended for industrial use.
- The product is intended for installation in a machine/ automated system. The applicable guidelines for the machine/ automated system must be observed and complied with.
- The product may only be used and operated within the scope of the technical data and the specifications in this manual, ▶ 3 [14].

2.2 Inappropriate use

The product is not being used as intended if:

- A SVP clamping device is not used to clamp the product or to unclamp the product.
- The information in the technical data is not observed when using and operating the product ▶ 3 [14].
- The maintenance and storage instructions are not observed ▶ 7 [37].
- The product is used with heat shrinking technology.
- The product is used in explosive environments.

2.3 Notes on safe operation

- Never combine multiple product extensions.
- Only use SCHUNK intermediate sleeves and always insert up to the fixed backstop point. The use of intermediate sleeves can reduce the transmittable torque.
- Long, projecting or heavy tools may only be clamped if the speed of rotation is reduced according to the ambient and operating conditions on site. The level of reduction is the responsibility of the operator and must ensure safe operation of the product.
- Maintain and service the product on a regular basis.
- All repair work must be performed by SCHUNK.
- The operational safety and function of the product must not be impaired by external influences.
- Follow the country-specific applicable safety, accident prevention, and environmental protection regulations for the application field of the product.

2.4 Personnel qualifications

Work conducted on and with the product by inadequately qualified personnel can lead to serious injuries and considerable material damage.

- Personnel must have read and understood the complete manual before beginning any work on the product.
- All work may only be performed by appropriately qualified personnel:
 - **Specialist personnel**
Specialist personnel have the specialized training, knowledge, and experience to perform the tasks entrusted to them, to recognize and avoid potential dangers, and know the relevant standards and regulations.
 - **Instructed person**
An instructed person has been instructed by the operator regarding the tasks entrusted to them and the potential dangers of inappropriate handling of the product.

Work on the product	Necessary qualification
Transport	Qualified personnel/ instructed person
Assembly/disassembly	Specialist personnel
Settings/functional testing	Specialist personnel
Operation	Qualified personnel/ instructed person
Maintenance/troubleshooting	Specialist personnel/ SCHUNK service personnel
Disposal	Specialist personnel/ SCHUNK service personnel

2.5 Personal protective equipment

Personal protective equipment is necessary to protect staff in the event of a danger that may interfere with their health or safety at work.

- Observe the valid safety and accident prevention regulations and health & safety at work rules.
- When working on and with the product, wear the required personal protective equipment.
 - Always wear safety boots.
 - Wear close-fitting protective clothing and place a hairnet over long hair when dealing with moving components.
 - Wear protective gloves to guard against sharp edges and corners and rough surfaces.
 - Wear heat-resistant protective gloves when handling hot surfaces.
 - Wear protective gloves and safety goggles when handling hazardous substances.

2.6 Handling during transport

Incorrect handling during transport can make the product unsafe and risks the danger of serious injuries and considerable material damage.

- During transport and handling, secure the product to prevent it from falling.
- Do not walk under suspended loads.
- Do not leave suspended loads unattended.
- Observe the assembly and operating manual specifications for transport.
- Use suitable assembly and transport devices*.
- Take precautions against pinching and crushing.

* Assembly and transportation devices must be able to carry at least twice the attached weight.

2.7 Structural changes

Modifications, changes or reworking, e.g. additional threads or holes, can damage the product or impair its functionality or safety.


- Structural changes should only be made with the written approval of SCHUNK.
- Use only original spare parts and spares authorized by SCHUNK.

2.8 Behavior in case of malfunctions

Incorrect handling during a malfunction can make the product unsafe and risks the danger of serious injuries and considerable material damage.

- Immediately remove the product from operation and report the malfunction to the responsible departments/persons.
- Get appropriately qualified personnel ▶ 2.4 [10] to rectify the malfunction.
- Observe the information on troubleshooting in the assembly and operating manual.
- Faults not described in the assembly and operating manual may only be rectified after consultation with SCHUNK.
- After a malfunction, ensure that the product is able to function properly and no increased risks have arisen.
- Do not recommission the product until the malfunction has been rectified.

2.9 Hazardous points on the product

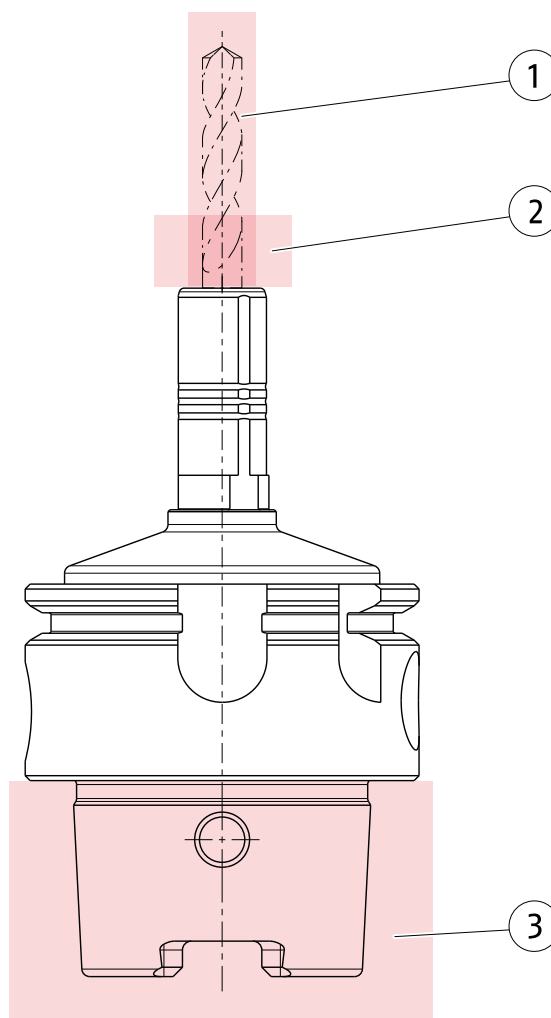

NOTE: Illustration may differ from the actual design.

Position	Danger when	Danger due to
1	Assembling/disassembling the product/ Clamping the tool	Cutting
2	Clamping the tool	Crushing risk
3	Assembling/disassembling the product	Crushing risk

3 Technical data

CAUTION! The following values may deviate for special products. The corresponding details on the enclosed approval drawing must be observed!

3.1 General data

Max. coolant pressure [bar]	100
Tool shank tolerance	h6
Min. tool shank hardness [HRC]	50
Min. tool shank strength [N/mm ²]	1000
Permissible direction of rotation for product with HJND interface	right

NOTE: The min. transmittable torque applies to tool shank smallest dimension h6, tool shank oiled. Measured at room temperature. At higher operating temperatures, actual shank diameter and, depending on the lubrication condition, the transmittable torque may be higher.

The load limits of the spindle holder must be observed.

NOTE

For products with an ER or HJND mount, individual specifications must be observed!

NOTE

For products with a HJND mount, the permissible direction of rotation must be observed!

Admission:
HSK, SK, JIS-BT, Capto

Clamping \emptyset [mm]	Outer \emptyset [mm]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
0.5	9	<1	1
1	9	<1	3
1.5	9	<1	5
2	9	1	7
2.5	9	1.3	9
3	9	1.5	11
3.5	9	2	14
4	9	2.5	18
4.5	9	3	22
5	9	3.5	26
6	9	4.5	36
Clamping \emptyset [inch]	Outer \emptyset [mm]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1/8	9	1.5	11
3/16	9	3	22
1/4	9	4.5	36

* = with 2.5x clamping \emptyset , however max. 50 mm tool projecting length

Mounting:
ER 11, HSK-EZ15

Clamping \emptyset [mm]	Outer \emptyset [mm]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1	6.65	<0.5	3
1.5	6.65	<0.5	5
2	6.65	<0.5	7
2.5	6.65	<0.5	9
3	6.65	0.9	11
4	6.65	1.1	18
Clamping \emptyset [inch]	Outer \emptyset [mm]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1/8	6.65	1.5	11
3/16	6.65	3	18

* = with 2.5x clamping \emptyset , however max. 50 mm tool projecting length

Maximum tightening torque of the cap nut [Nm]

7

Mount:
ER 16

Clamping \emptyset [mm]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1	0.5	3
2	1	7
3	1.5	11
4	2	18
5	3	26
6	4.5	36
Clamping \emptyset [inch]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1/8	1.5	11
3/16	3	22
1/4	4.5	36

* = with 2.5x clamping \emptyset , however max. 50 mm tool projecting length

Maximum tightening torque of the cap nut [Nm]

25

**Mount:
ER 20**

Clamping \emptyset [mm]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1	0.5	3
2	1	7
3	1.5	11
4	2	18
5	3	26
6	4.5	36

Clamping \emptyset [inch]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1/8	1.5	11
3/16	3	22
1/4	4.5	36

* = with 2.5x clamping \emptyset , however max. 50 mm tool projecting length

Maximum tightening torque of the cap nut [Nm]

30

**Mount:
ER 25**

Clamping \emptyset [mm]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1	0.5	3
2	1	7
3	1.5	11
4	2	18
5	3	26
6	4.5	36

Clamping \emptyset [inch]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1/8	1.5	11
3/16	3	22
1/4	4.5	36

* = with 2.5x clamping \emptyset , however max. 50 mm tool projecting length

Maximum tightening torque of the cap nut [Nm]

35

**Mount:
ER 32**

Clamping \emptyset [mm]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1	0.5	3
2	1	7
3	1.5	11
4	2	18
5	3	26
6	4.5	36

Clamping \emptyset [inch]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
1/8	1.5	11
3/16	3	22
1/4	4.5	36

* = with 2.5x clamping \emptyset , however max. 50 mm tool projecting length

Maximum tightening torque of the cap nut [Nm]
55

**Mount:
HJND 50**

Clamping \emptyset [mm]	Min. transmittable torque [Nm]	Permissible radial force F [N] *
3	1.5	11
4	2	18

* = with 2.5x clamping \emptyset , however max. 50 mm tool projecting length

Thread	Maximum tightening torque of the HJND interface [Nm]
M8	8

3.2 Ambient conditions and operating conditions

Relative air humidity 20–80%

Range	Temperature [°C]
Operating temperature	+20 to +50
Transport temperature	-10 to +50
Storage temperature	+10 to +30
Cleaning temperature	0 to +60
Test temperature clamping force control	+20 to +25
Maximum temperature, clamping without tool	+ 25

NOTE: The temperatures refer to the product.

3.3 Maximum RPM

The maximum RPM depends on the interface of the spindle and tool to be clamped.

Mount	Max. speed [RPM]
HSK-A25 to HSK-A50	85,000
HSK-E20 to HSK-E50	85,000
SK 30	85,000
JIS-BT30	85,000
CAPTO C4	85,000
ER11 to ER20	40,000
ER25 to ER32	35,000
HJND 50	*
HSK-EZ15	60,000

* Limit speeds for products with HJND mount, see datasheet at: schunk.com/downloads

3.4 Minimum clamping depth and max. clamping depth

Mount	Clamping diameter	Outer Ø [mm]	Minimum clamping depth [mm]
HSK-A25	1-6 mm, 1/8 inch	9	18
HSK-A32	1-6 mm, 1/8 inch	9	18
HSK-A40	1-6 mm, 1/8 inch	9	18
HSK-A50	1.5-6 mm	9	18
HSK-E20	1-6 mm, 1/8 inch	9	18
HSK-E25	0.5-6 mm, 1/8 inch	9	18
HSK-E32	0.5-6 mm, 1/8 inch	9	18
HSK-E40	0.5-6 mm, 1/8 inch	9	18
HSK-E50	1-6 mm	9	18
SK 30	1-6 mm, 1/8 inch	9	18
JIS-BT 30	1-6 mm, 1/8 inch	9	18
CAPTO C4	3-8 mm, 1/8 inch	9	18
ER 11	1-4 mm, 1/8 inch	6.65	14.5
not coolant-proof	3/16 inch	6.65	14.5
ER 16 / ER 20	1-6 mm, 1/8 inch	9	17.5
ER 25 / ER 32	3/16 inch	9	17.5
not coolant-proof	1/4 inch	9	17.5
ER 16 / ER 20		9	22
ER 25 / ER 32	3-5 mm		
coolant-proof			
HJND 50	3-4 mm	9	17.5
HSK-EZ15	1-4 mm	6.65	14.5


3.5 Usable tool shank types

CAUTION

Material damage to the product due to the use of incorrect shank types!

Products with an ER interface in coolant-proof design or HJND interface may only be clamped with smooth tool shanks – Fig. 1 – in accordance with DIN 1835-1 Form A and DIN 6535 Form HA.

3.5.1 Product with HSK, SK, JIS-BT, Capto or ER mount, ER mount not coolant-proof

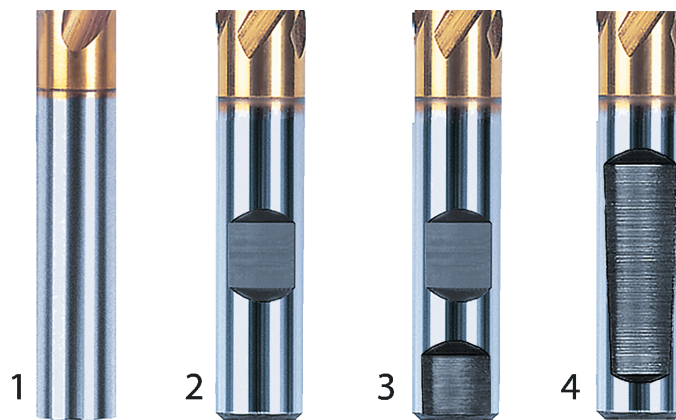

1. Shank type according to DIN 1835-1 form A and DIN 6535 form HA
2. Shank type according to DIN 1835-1 form B and DIN 6535 form HB (up to \varnothing 20 mm)
3. Shank type according to DIN 1835-1 form B and DIN 6535 form HB (from \varnothing 25 mm)
4. Shank type according to DIN 1835-1 form E and DIN 6535 form HE

NOTE: Tool shanks with recesses (forms 2, 3 and 4) can impair the balancing grade and run-out accuracy of the overall system.

- Tool shanks with diameters not within tolerance range h6 cannot be fitted or else no transmittable torque is guaranteed.
- Tool shanks with projections/markings are difficult or impossible to fit and can impair the run-out accuracy of the overall system.

NOTE: Observe the minimum hardness and minimum strength of the tool shank ▶ 3 [14].

3.5.2 Product with ER mount coolant-proof or HJND mount



1. Shank type according to DIN 1835-1 form A and DIN 6535 form HA
 - Tool shanks with diameters not within tolerance range h6 cannot be fitted or else no transmittable torque is guaranteed.
 - Tool shanks with projections/markings are difficult or impossible to fit and can impair the run-out accuracy of the overall system.

NOTE: Observe the minimum hardness and minimum strength of the tool shank ▶ 3 [14].

3.6 Further information on the product



*Data matrix
code*

For more information about the product, proceed as follows:

- using an internet-enabled smartphone or tablet, scan the data matrix code located on the product.

NOTE: A separate app may be required to scan the Data Matrix code.


or:

- Open the website **schunk.com** and enter the 8-digit serial number ("SN:") located on the product in the search field.

For further information, visit schunk.com/serialisierung

4 Design and description

4.1 Design

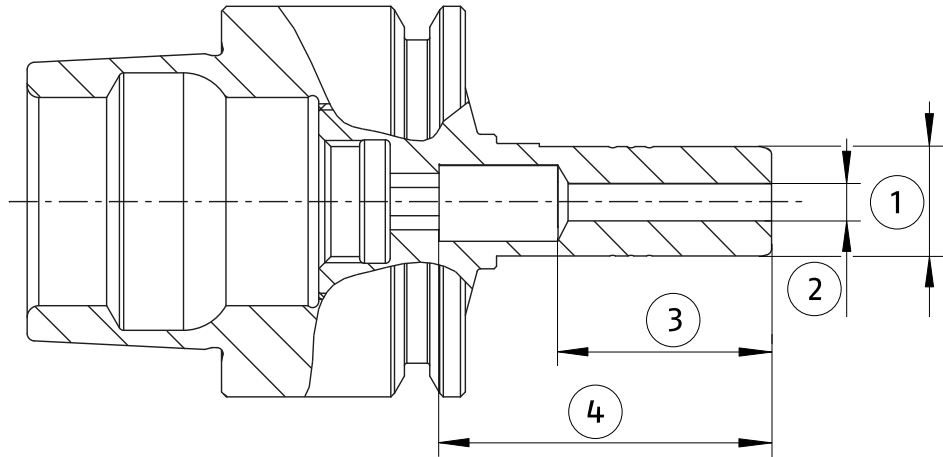

NOTE: Illustration may differ from the actual design.

Position	Description
1	Outer diameter
2	Clamping diameter
3	Minimum clamping depth
4	Max. clamping depth

4.2 Functional description

The product clamps by deforming the clamping diameter. By using the TRIBOS SVP clamping device and the matching pressure actuation, the polygonal clamping diameter of the toolholder becomes round. The tool shank can now be inserted. If the pressure on the clamping diameter is subsequently reduced, then it will assume its polygonal shape again and clamp the tool.

Image number	Function
1	Starting position
2	Clamping diameter becomes round
3	Inserting the tool shank
4	Tool clamped

5 Operation

5.1 Basic information



⚠ WARNING

Risk of injury due to ejected parts!

The max. speed of rotation of the machine/automated system must be reduced when using long, projecting or heavy tools and with extensions.



⚠ WARNING

Risk of injury when the product is rotating, due to the possibility of parts flying off!

- Comply with the technical data.
- Make sure the attachments and operating components present are installed and fitted correctly.
- Check the clamping force regularly.
- Take appropriate protective measures to secure danger zones.
- Wear suitable protective equipment.



⚠ WARNING

Risk of injury due to the tool being flung out if the speed of rotation is too high or not suitable!

- Comply with the technical data.
- Do not exceed the maximum speed.
- Reduce the speed of rotation appropriately for strongly protruding or balance-asymmetrical tools.
- Take appropriate protective measures to secure danger zones.
- Wear suitable protective equipment.



⚠ WARNING

Risk of injury due to ejection of the product with HJND interface if the direction of rotation is incorrect.

- Observe the direction of rotation in the technical data.



⚠ CAUTION

Risk of injury from tools with sharp edges!

Sharp edges on tools can cause cuts.

- Wear protective gloves when assembling the tool.



⚠ CAUTION

Risk of crushing and knocks during tool changes!

- Do not reach between the product and the tool when changing tools.
- Wear suitable protective equipment.

CAUTION

Material damage due to burrs and dirt!

- The tool must be free of burrs and dirt at the shank.

CAUTION

Material damage due to exceeding the permissible pressure!

Excessive pressure causes deformation of the product and leads to loss of function.

- Observe and adhere to the pressure specifications of the product.

CAUTION

Material damage due to incorrect minimum clamping depth!

Too small a clamping depth of the tool leads to a loss of accuracy and torque on the product.

- Observe the minimum clamping depth of the tool.

NOTE

The product may only be equipped with an SVP clamping device. Observe the operating manual of the corresponding SVP clamping device.

5.2 Clamping the tool

CAUTION! The tools to be clamped must be deburred at the surfaces that come into contact with the product, may not have sharp contours and must be free of oil, grease and dirt.

NOTE: SRE reduction inserts are required for clamping the tool with SVP clamping devices SVP-2 and -2D.

NOTE

For products with ER interface in coolant-proof design or with HJND interface, individual specifications must be observed!


5.2.1 Product with HSK, SK, JIS-BT, Capto or ER mount, ER mount not coolant-proof

1. Use the appropriate SVP clamping device to clamp the tool.
2. Insert the tool into the product and clamp it according to the specifications in the operating manual of the SVP clamping device.

CAUTION! The minimum clamping depth ▶ 3.4 [20] must not be undershot!


NOTE: The max. pressure specification on the product may not be exceeded!

3. Remove the product from the SVP clamping device with the tool clamped.

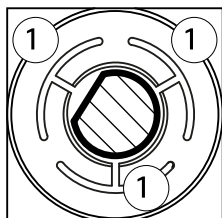

CAUTION! When clamping tool shanks of form E or HE (shank type 4), ▶ 3.5 [21] pay attention to the position of the recesses with respect to the pressure segments ①! This is the only way to ensure that the clamping surfaces are correctly positioned on the solid shank of the tool.

5.2.2 Product with coolant-proof ER mount

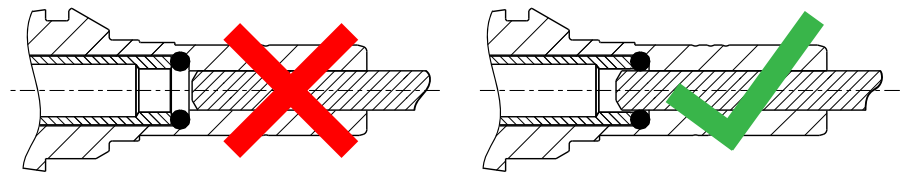

1. Use the appropriate SVP clamping device to clamp the tool.
2. Insert the tool into the product according to the specifications in the operating manual of the SVP clamping device.
NOTE: The max. pressure specification on the product may not be exceeded!
3. The resistance when fitting is due to the O-ring. Use light pressure to push the tool to the desired position.
CAUTION! If the clamping depth of the tool is too shallow, the product is not coolant-tight. The minimum clamping depth ▶ 3.4 [20] must not be undershot!
4. Remove the product from the SVP clamping device with the tool clamped.

CAUTION! Only tools with smooth tool shanks according to DIN 1835-1 Form A and DIN 6535 Form HA may be clamped ▶ 3.5 [21].

5.2.3 Product with HJND mount

1. Use the appropriate SVP clamping device to clamp the tool.
2. Insert the tool into the product and clamp it according to the specifications in the operating manual of the SVP clamping device.
CAUTION! The minimum clamping depth ▶ 3.4 [20] must not be undershot!
NOTE: The max. pressure specification on the product may not be exceeded!
3. Remove the product from the SVP clamping device with the tool clamped.

CAUTION! Only tools with smooth tool shanks according to DIN 1835-1 Form A and DIN 6535 Form HA may be clamped ▶ 3.5 [21].

5.3 Unclamping the tool

NOTE: SRE reduction inserts are required for unclamping the tool with SVP clamping devices SVP-2 and -2D.

1. Disassemble the product ▶ 9 [40].
2. Use the appropriate SVP clamping device to unclamp the tool.
3. Unclamp the product according to the specifications in the operating manual of the SVP clamping device.

NOTE: The max. pressure specification on the product may not be exceeded!

4. Remove the tool from the product.
⇒ If the tool sticks to the product, it can be loosened by inserting a punch through the rear opening and pushing or gently knocking it.
5. Remove the product from the SVP clamping device.


5.4 Tool changes

1. Unclamp and remove the tool ▶ 5.3 [29].
2. Join and clamp the new tool ▶ 5.2 [27].

5.5 Coolant supply

The product is available in different variants. Depending on the holder for the machine interface, it is possible that the product:

- is equipped with a coolant supply via the collar. On delivery, this coolant supply is sealed with set-screws.
- is equipped with a centralized internal coolant supply. The coolant supply can be connected via the retention knob.

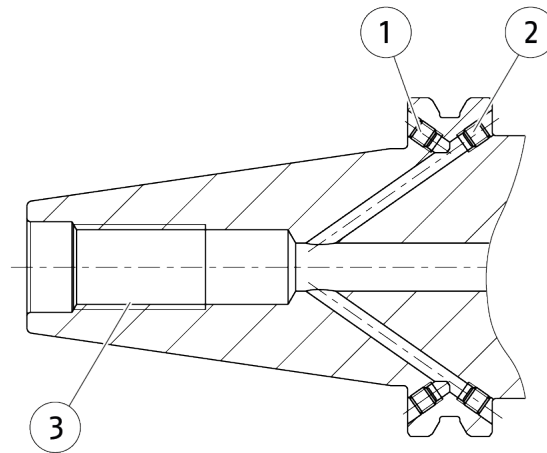

NOTE: Illustration may differ from the actual design.

Position	Description
1	Set-screw – access to the coolant supply
2	Set-screw – closure of the coolant supply *
3	Connection for centralized internal coolant supply

* if available

To connect the coolant supply via the collar, proceed as follows:

1. Unscrew and remove the set-screw (item 1).
2. Turn in the coolant supply.

NOTE: Set-screw (item 2) is used to close the hole and may not be unscrewed.

6 Assembly

6.1 Basic information



⚠ WARNING

Risk of injury due to incorrect assembly!

If assembled incorrectly, the product may be flung out during rotation, causing severe injuries.

- Regularly check the fastening of the product.
- Take suitable protective measures to secure the danger zone.
- Wear suitable protective equipment.



⚠ WARNING

Risk of injury if the product falls during transport, assembly or disassembly.

Due to the oily surface required to preserve it, the product can slip through your hands, resulting in injury.

- Take appropriate safety measures to prevent the product from falling.
- Only install the product on machines with the appropriate connection dimensions.
- Wear suitable protective equipment, especially safety gloves.



⚠ CAUTION

Risk of crushing, impact and cutting when assembling and disassembling the product!

- Do not reach between the product and machine.
- Wear suitable protective equipment, especially protective gloves and safety boots.

CAUTION

Risk of possible damage to the product!

- When transporting and handling the product, ensure that it is not damaged by knocks, impact, etc.

6.2 Assembly of the product

To ensure optimum machining results, the product must be positioned and secured precisely on the machine interface.

NOTE: Only install the product on machines with the appropriate connection dimensions. Observe the mounting instructions from the manufacturer of the machine interface.

IMPORTANT! Before the product is assembled, the tool must be fitted and clamped!

NOTE


For products with an ER or HJND interface, individual specifications must be observed!

6.2.1 Product with HSK, SK, JIS-BT, or Capto mount

1. Clamping the tool ▶ 5.2 [27].
2. Clean all interfaces on the product and machine.
3. Place the product on the machine interface in the correct position and fit it as far as the stop.
4. Clamp the product according to the specifications of the machine interface manufacturer.
5. Check that the product is in the correct position and securely clamped in the machine.

Important! Safe clamping of the product in the machine must be ensured!

6.2.2 Product with ER mount

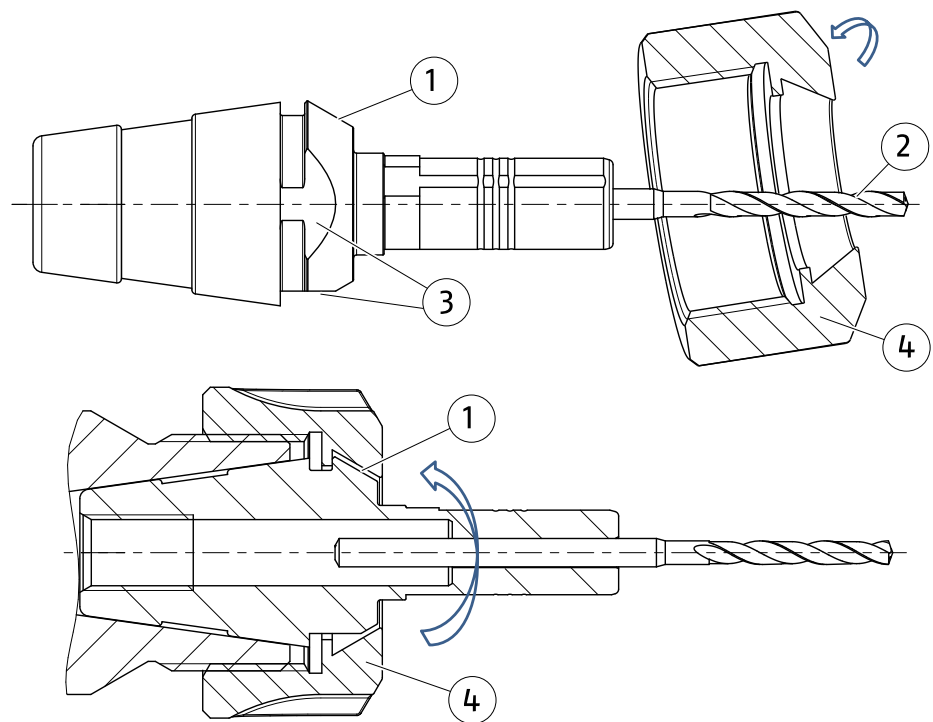

Position	Description
1	30° chamfer
2	Tool
3	90° surface
4	Cap nut

1. Clamping the tool ▶ 5.2 [📄 27].
2. Clean all interfaces on the product and machine.
3. Tilt the cap nut and turn it into the area of the two 90° surfaces on the product.
4. Insert the cap nut until it lies flat against the 30° chamfer.
5. Place the product with the fitted cap nut onto the machine interface in the correct position and fit it as far as the stop.
6. Use the actuating key to actuate or loosen the cap nut ▶ 1.4 [📄 7].
NOTE! Observe the maximum tightening torque of the cap nut ▶ 3 [📄 14].
7. Clamp the product according to the specifications of the machine interface manufacturer.
8. Check that the product is in the correct position and securely clamped in the machine.

Important! Safe clamping of the product in the machine must be ensured!

6.2.3 Product with HJND mount

1. Clamping the tool ▶ 5.2 [📄 27].
2. Clean all interfaces on the product and machine.
3. Place the product on the machine interface in the correct position and use a torque wrench ▶ 1.4 [📄 7] to turn it as far as the stop.

NOTE! Observe the maximum tightening torque of the HJND interface ▶ 3 [📄 14].

4. Check that the product is in the correct position and securely clamped in the machine.

Important! Safe clamping of the product in the machine must be ensured!

7 Maintenance

7.1 Basic information



⚠ WARNING

Risk of injury due to sharp edges and rough or slippery surfaces!

- Wear suitable protective equipment, especially protective gloves.



⚠ CAUTION

Injury of the eyes due to dirt particles!

When cleaning with compressed air, the eyes may be injured by flying dirt particles.

- Wear suitable protective equipment, particularly protective goggles.

For trouble-free, long-lasting use, clean, maintain and check the functionality of the product regularly.

Repair work may only be carried out by SCHUNK!

If you have any questions regarding maintenance and servicing, our technical after-sales service is available during our business hours:

Service telephone: +49-7133-103-2956

service.toolholder@de.schunk.com

7.2 Intervals and tasks

Operation	Interval period
Cleaning the clamping surface	after every clamping procedure
Cleaning the product	daily

The specified maintenance intervals are based on empirical data gathered by SCHUNK and are a recommendation. Depending on the ambient and operating conditions, as well as the clamping frequency of the product, the maintenance intervals need to be adapted and noted accordingly. For maintenance intervals with two or more specifications, the specification that applies first is valid.

7.2.1 Cleaning the clamping surface

1. Disassemble the product ▶ 9 [40].
2. Remove tool ▶ 5.3 [29].
3. Clean the clamping bore and the groove, if present, with a cleaning agent containing solvents.
4. Carefully remove any stubborn dirt with a suitable tool ▶ 1.4 [7].
5. Wipe the surfaces dry with a clean cloth.

7.2.2 Cleaning the product

1. Disassemble the product ▶ 9 [40].
2. Remove tool ▶ 5.3 [29].
3. Clean the entire product with compressed air.
4. Carefully remove any stubborn dirt with a suitable tool.
5. Wipe all surfaces dry with a clean cloth.
6. Check the product for deformation, damage or wear, in particular the surfaces that come in contact with the tool.
7. Lightly oil the entire surface of the product.

NOTE: Damage or wear can compromise the functioning of the product. If non-replaceable parts of the product are worn or damaged, return the product to SCHUNK for inspection.

8 Troubleshooting

Malfunction/ error	Possible cause	Solution(s)
The tool cannot be inserted	SRE reduction insert not used	Use SRE reduction insert
	SRE reduction insert not mounted correctly	Observe the operating manual of the SVP clamping device
	Product not correctly unclamped	Observe the operating manual of the SVP clamping device
		Observe the specifications printed on the product
Workpiece cannot be removed	Tool has material accumulations	Remove material accumulations
	Fine particles between product and tool	Use a punch to lightly strike through the rear opening
	Product not correctly unclamped	Observe the operating manual of the SVP clamping device
Observe the specifications printed on the product		
Insufficient run-out accuracy	Product is not correctly positioned on the machine interface	Clean the contact surfaces of the product and machine
	The tool shank has recesses	Use the tool shank without recesses

If you have any questions regarding troubleshooting, our technical after-sales service is available during our business hours:

Service telephone: +49-7133-103-2956
service.toolholder@de.schunk.com

9 Disassembly

9.1 Basic information



⚠ WARNING

Risk of injury if the product falls during transport, assembly or disassembly.

Due to the oily surface required to preserve it, the product can slip through your hands, resulting in injury.

- Take appropriate safety measures to prevent the product from falling.
- Only install the product on machines with the appropriate connection dimensions.
- Wear suitable protective equipment, especially safety gloves.



⚠ CAUTION

Risk of crushing, impact and cutting when assembling and disassembling the product!

- Do not reach between the product and machine.
- Wear suitable protective equipment, especially protective gloves and safety boots.

CAUTION

Risk of possible damage to the product!

- When transporting and handling the product, ensure that it is not damaged by knocks, impact, etc.

9.2 Disassembly of the product

1. Secure the product against falling down.
2. Loosen connection to the machine interface. Observe the specifications of the machine manufacturer.
3. Remove the product.
4. If necessary, remove tool ▶ 5.3 [📄 29].

NOTE: To avoid damage, only place the product on a clean and soft surface.

10 Storage

When storing the product for a longer period of time, observe the following points:

- Clean the product and lubricate it lightly.
- Only store the product in dry rooms.
- Protect the product from major temperature fluctuations.
- Comply with the storage temperature specified in the technical data.
- Store the product in a suitable transport container.

11 Disposal

- Follow local regulations on dispatching product components for recycling or proper disposal.
- Alternatively, you can return the product to SCHUNK for correct disposal.



SCHUNK SE & Co. KG
Spanntechnik | Greiftechnik | Automatisierungstechnik

Bahnhofstr. 106 – 134
D-74348 Lauffen/Neckar
Tel. +49-7133-103-0
info@de.schunk.com
schunk.com

Folgen Sie uns | *Follow us*



Wir drucken nachhaltig | *We print sustainable*